



KEYBOARD TRAY


INSTRUCTION MANUAL

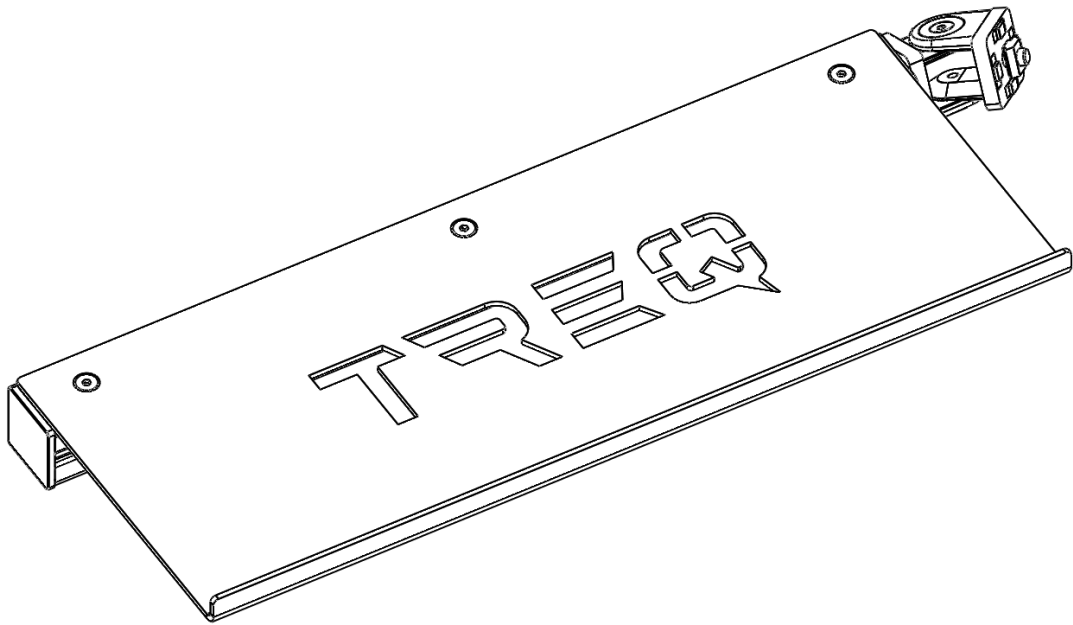

REQUIRED TOOLS:

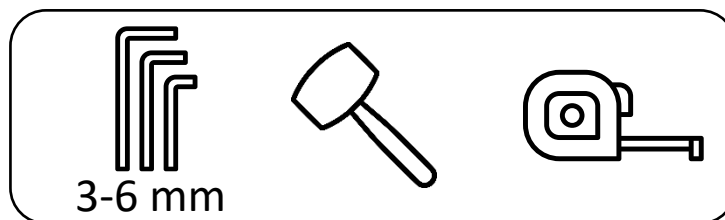


1

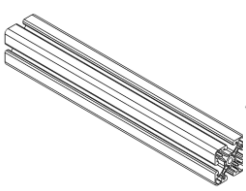


Profile 4040 L=500

1x

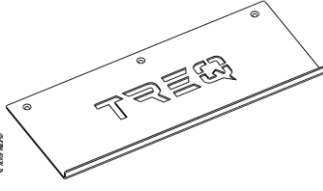


Tray

1x

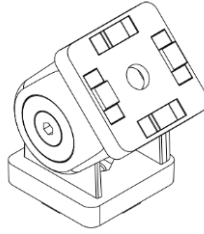


Hinge 4040

1x

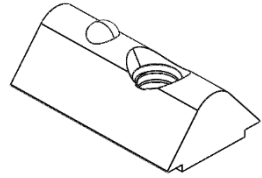


Click-in Nut M5

3x

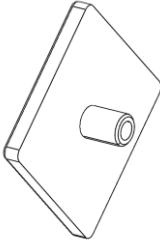


Cover 4040

1x

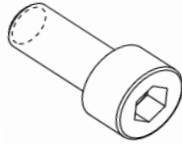


M8x16

2x

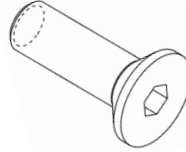


M5x12

3x

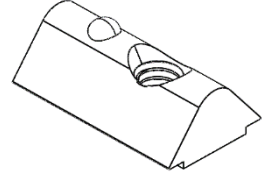

Click-in Nut M8


1x

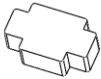

Cross


2x

2

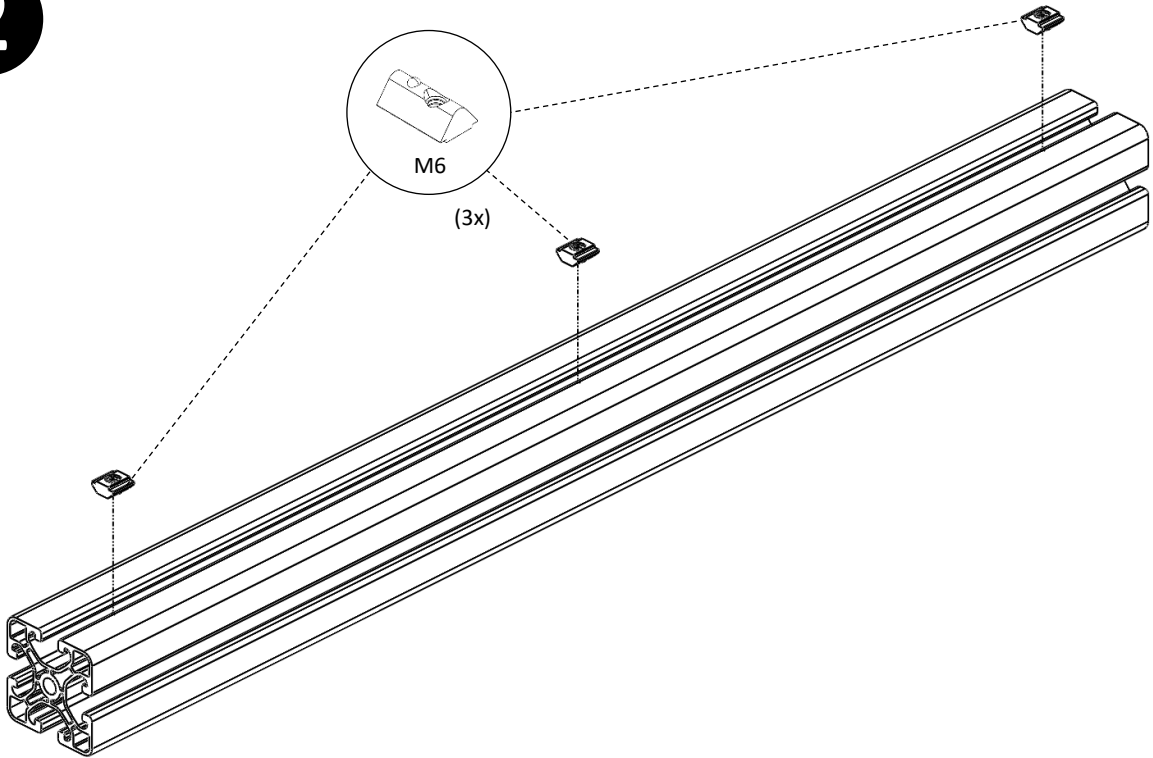


3

One side of the 4040 L=500 profile has a threaded M8 hole. This is the side where the hinge goes.

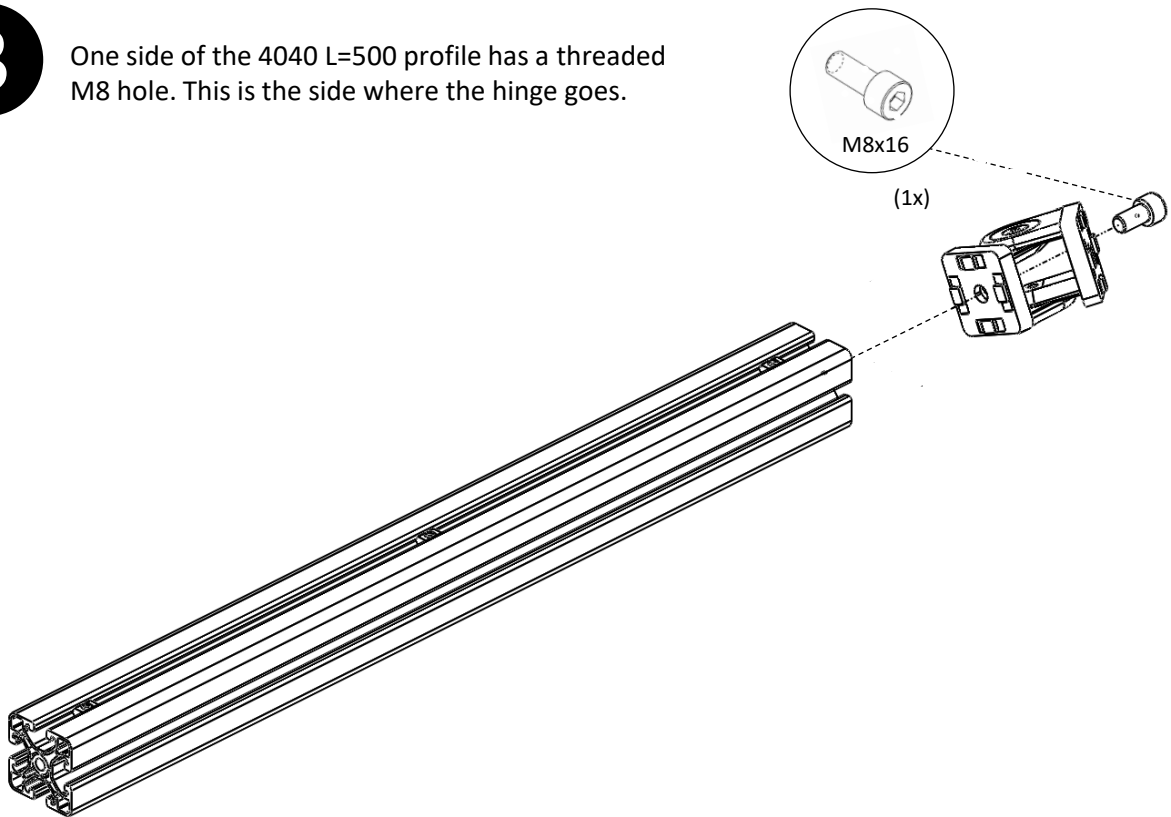

4

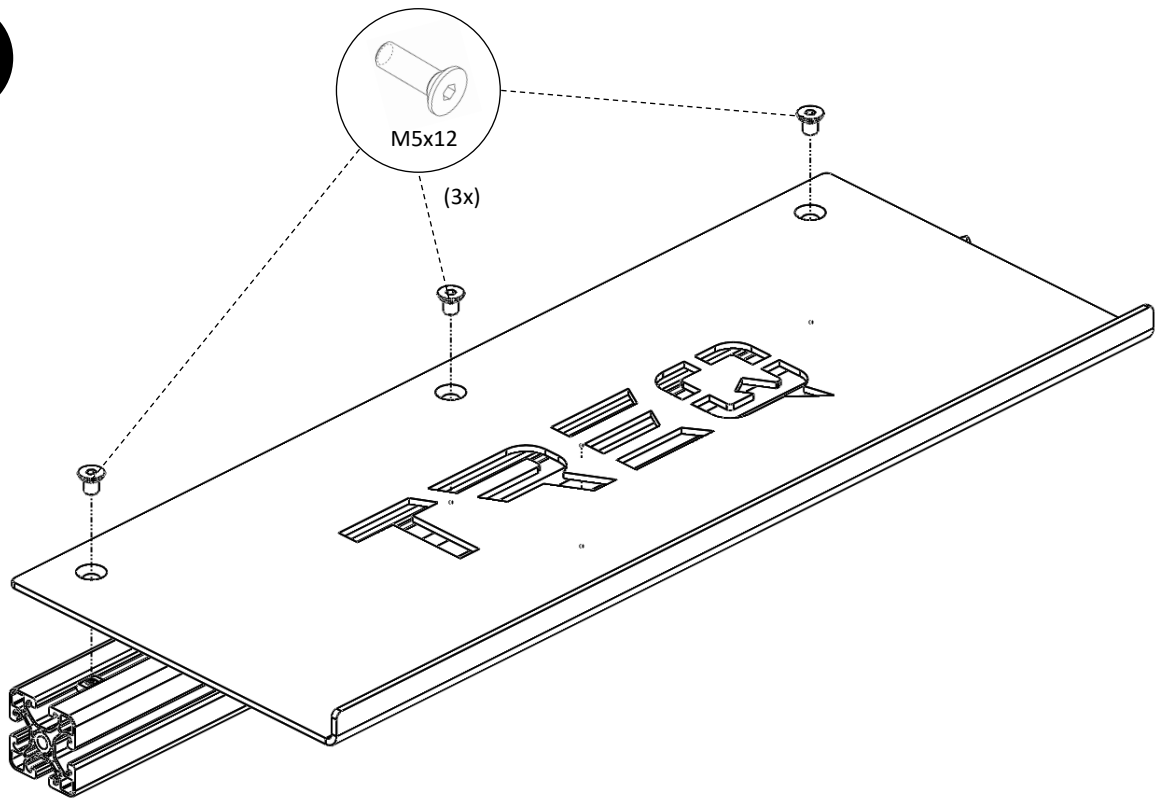

5

The hinge is delivered with at least 2 little 'crosses'. Place these with the 10mm side into the hinge. The 8mm side goes into the profile slot, and stops the hinge from rotating.

